


Premium Remote

User's Manual

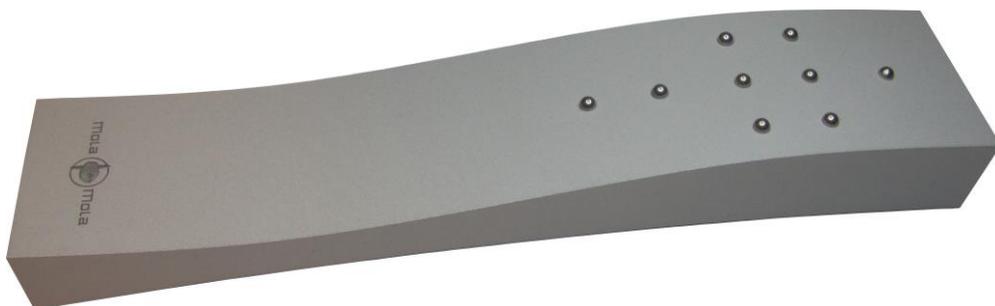


Packing List

Your product was shipped with the items checked below. Please verify that you find all items mentioned in this list before you start setting up:

Item	Qty	Shipper's signature
This Manual	1	
Premium Remote Control Unit	1	
Pair of batteries (CR2032)	1	

Batteries installation guide

Remove the battery cap

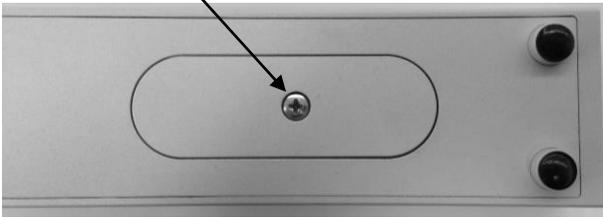

Slide the pair of batteries (CR2032), with the positive (+) side up, into the battery clamps



Place the battery cap back into the Premium Remote

Premium IR Remote Control Operation

The group of six buttons on the remote control mirrors the front panel buttons. Pushing any of them will power the unit on and/or engage the associated preset and/or mute the unit. The top button acts as mute/standby button and does the exact same as the preset buttons except it doesn't switch presets. This is mainly useful because the remote control unit obviously doesn't have LEDs to indicate which preset is engaged and sometimes you just want to mute the unit regardless of what was playing.

The volume up/down buttons operate as they do anywhere else. The LED on the volume knob will come on to provide easy visual feedback of the volume setting.

Revision History

Revision	Description	Date
R0	Initial draft	26-6-2015